


HAMPPTON BAY®

USE AND CARE GUIDE

SUNNYMEAD 4 PIECE CHAT SET

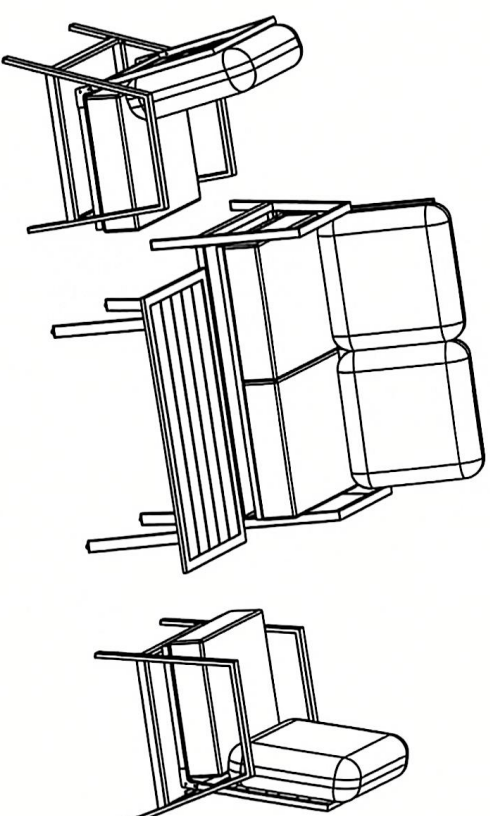

or,

irday

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory chair ID # FRN-313982-C
Factory loveseat ID # FRN-313982-L
Factory coffee table ID # FRN-313982-T

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this chair set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2
Safety Information.....	2
Warranty	2
What is covered	2

Coffee Table Pre-assembly	3
Coffe Table Assembly	4
Chair Pre-assembly	5-6
Chair assembly	7-8
Loveseat Pre-assembly	9-10
Loveseat Assembly	11-12
Care and Cleaning	13

Important Safety Information

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

SAVE THESE INSTRUCTIONS.

We recommend re-tightening all of the hardware two weeks after assembly. Periodic checking of all connections and hardware is also advised.



DANGER: Keep children out of the assembly area during assembly.



WARNING: DO NOT use sharp equipment such as a knife and scissors when removing the protective material, as it may damage the product.



WARNING: DO NOT sit or stand on the table.



WARNING: DO NOT stand on the chair.

Warranty

TWO YEAR LIMITED WARRANTY

WHAT IS COVERED

The frame is warranted to be free of manufacturing defects for two years from the purchase date. If the frame of your furniture fails (ie. broken frame or weld) within two years of ownership, Hampton Bay will repair, provide replacement parts, or replace the product at our option. Frame finishes are warranted against blistering, cracking, or peeling for two years from purchase date. Fabric is warranted to be free of manufacturing defects for two years. This is a residential use warranty only. Warranty is void when product is used for commercial settings. This warranty is a limited warranty and applies to the original purchase only. Proof of purchase is required.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HAMPTONBAY.com.

Coffee Table Pre-assembly

PLANNING ASSEMBLY

Before beginning the assembly of this product, make sure all parts are present. Compare parts with Package Contents and Hardware included lists. If any part is missing or damaged, do not attempt to assemble product, and return it to the place of purchase.

Installation requires two people.

HARDWARE INCLUDED

**NOTE:** Hardware not shown to actual size.



Part	Description	Quantity
AA	Bolt M6 x 20 mm	16
DD	Small Washer	16
GG	Hex Wrench	1

PACKAGE CONTENTS




Part	Description	Quantity
K	Table Leg	1
L	Table Leg	4

Coffee Table Assembly


1 Attaching the Legs to the Table Top

- Place the table top (K) upside down on a soft, clean and level surface.
- Insert the legs (L) into the table top (K), by using M6 x 20 mm bolts (AA), small washers (DD), and hex wrench (GG).
- Fully tighten all the bolts.

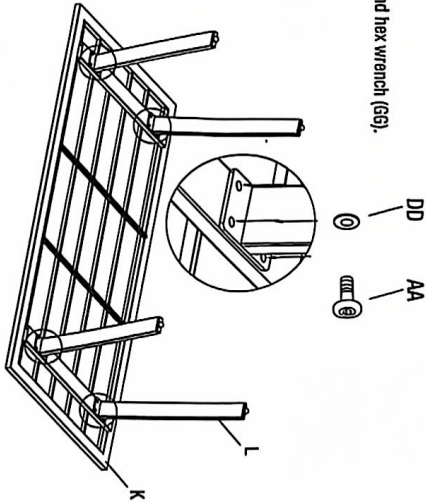

2 Completing the Assembly

- Turn the table over.
- Turn the self-leveling feet clockwise or counterclockwise to balance the table as needed.
- Now the table is ready for use.

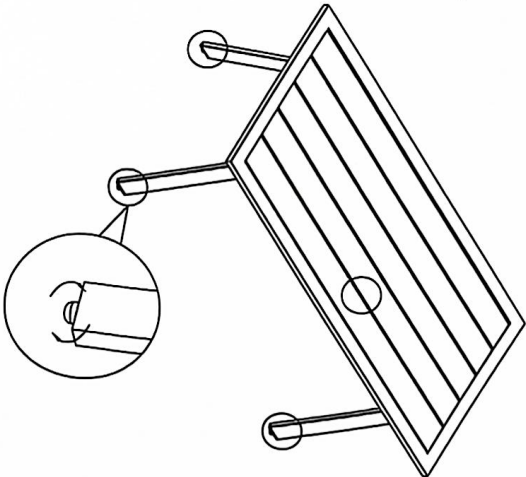

Chair Pre-assembly


PLANNING INSTALLATION

Before beginning the assembly of this product, make sure all parts are present. Compare parts with Package Contents and Hardware included lists. If any part is missing or damaged, do not attempt to assemble product, and return it to the place of purchase.

Installation requires two people.

HARDWARE INCLUDED


 NOTE: Hardware not shown to actual size.

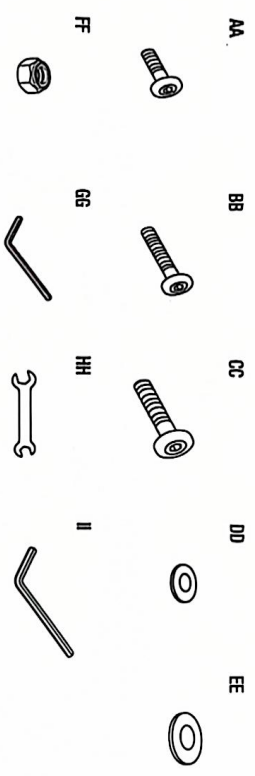

Part	Description	Quantity
AA	Bolt M6 x 20 mm	16
BB	Bolt M6 x 35 mm	8
CC	Bolt M8 x 35 mm	8
DD	Small Washer	24
EE	Larger Washer	8
FF	Screw Nut-M6	8
GG	Hex Wrench	1
HH	Wrench	1
II	Larger Hex Wrench	1

Chair Pre-assembly (continued)

PACKAGE CONTENTS

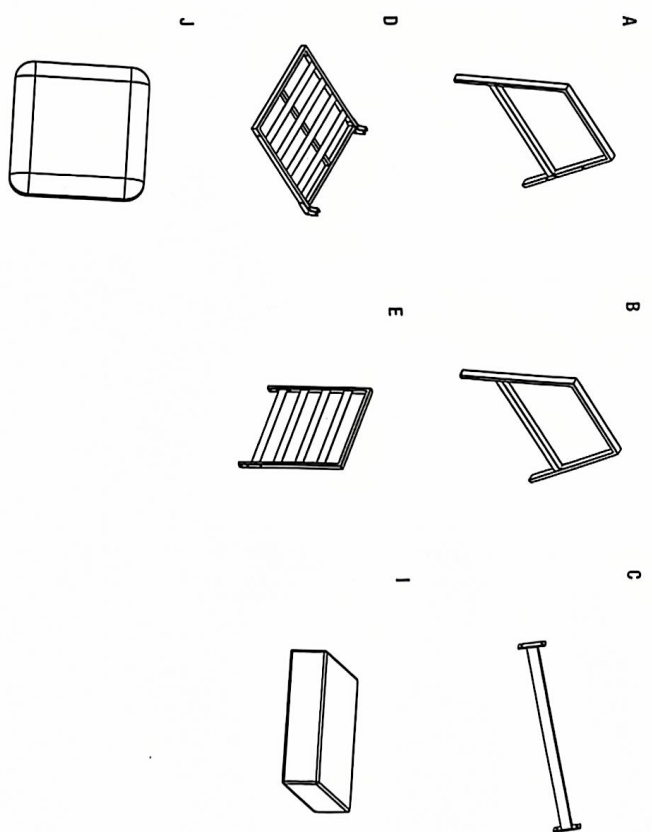


Part	Description	Quantity
A	Right Leg	2
B	Left Leg	2
C	Connecting Tube	4
D	Seat	2
E	Back	2
I	Seat Cushion	2
J	Back Cushion	2

Chair Assembly


1 Attaching the Chair Legs

- Place the right leg (A), left leg (B), and connecting tube (C) on a soft, clean and level surface.
- Attach the connecting tube (C) to the right leg (A) and left leg (B) using M6 x 20 mm bolts (AA), small washers (DD), and hex wrench (GG).
- Do not overtighten the bolts.

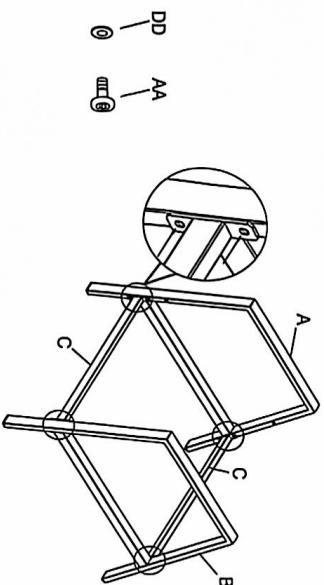

3 Attaching the Legs


- Insert the finished chair seat and back from step 2 into the leg frames from step 1.
- Attach the Back (E) and Seat (D) to the Legs (A & B), by using M8 x 35 mm bolts (CC), Larger Washers (EE), and Larger Hex Wrench (II).
- Fully tighten all the bolts on this chair.

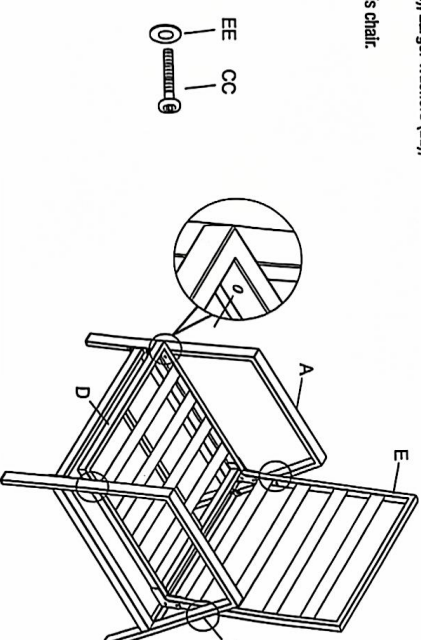

Chair Assembly (continued)


2 Attaching the Chair Seat and Back

- Place the chair seat (D) and back (E) on a soft, clean and level surface.
- Attach the back (E) to the seat (D), by using hex wrench (GG), M6 x 35 mm bolts (BB), small washers (DD), screw nut-M6 (FF), and wrench (HH).

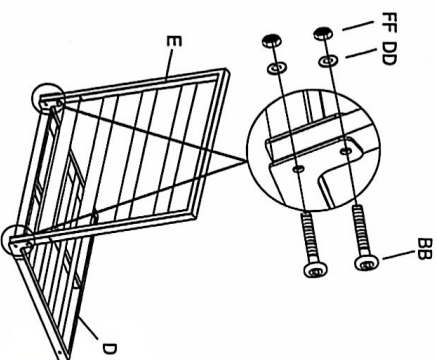

4 Placing the Cushions

- Place the Seat Cushion (I) and Back Cushion (J) on the Chair Seat (D) and Chair Back (E).
- The chair is now ready for use.

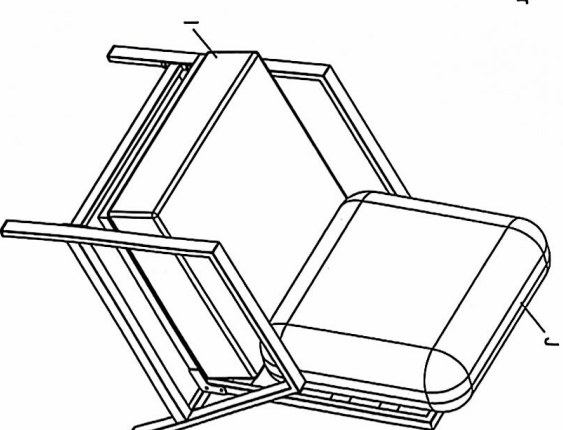


Loveseat Pre-assembly

PLANNING INSTALLATION

Before beginning the assembly of this product, make sure all parts are present. Compare parts with Package Contents and Hardware Included list. If any part is missing or damaged, do not attempt to assemble product, and return it to the place of purchase.

Installation requires two people.


HARDWARE INCLUDED

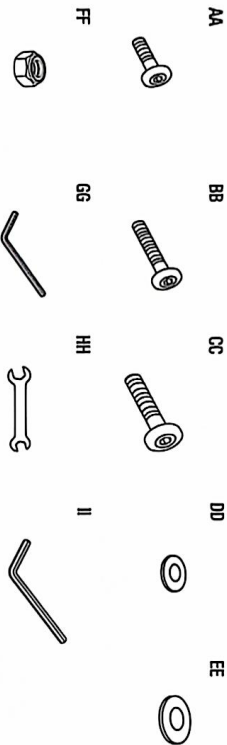

Part	Description	Quantity
AA	Bolt M6 x 20 mm	8
BB	Bolt M6 x 35 mm	5
CC	Bolt M8 x 35 mm	4
DD	Small Washer	13
EE	Larger Washer	4
FF	Screw Nut-M6	5
GG	Hex Wrench	1
HH	Wrench	1
II	Larger Hex Wrench	1

Loveseat Pre-assembly (continued)

PACKAGE CONTENTS

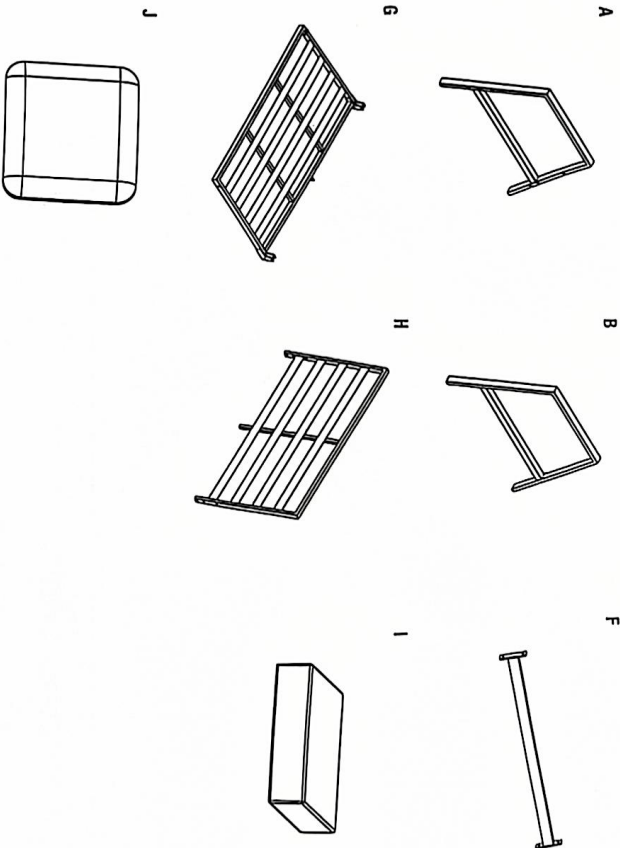


Part	Description	Quantity
A	Right Leg	1
B	Left Leg	1
F	Support Tube	2
G	Seat	1
H	Back	1
I	Seat Cushion	2
J	Back Cushion	2

Loveseat Assembly


1 Attaching the Loveseat Legs

- Place the right leg (A), left leg (B), and support tube (F) on a soft, clean and level surface.
- Attach the support tube (F) to the chair right leg (A) and left leg (B) by using M6 x 20 mm bolts (AA), small washer (DD), and hex wrench (GG).
- Do not overtighten the bolts.

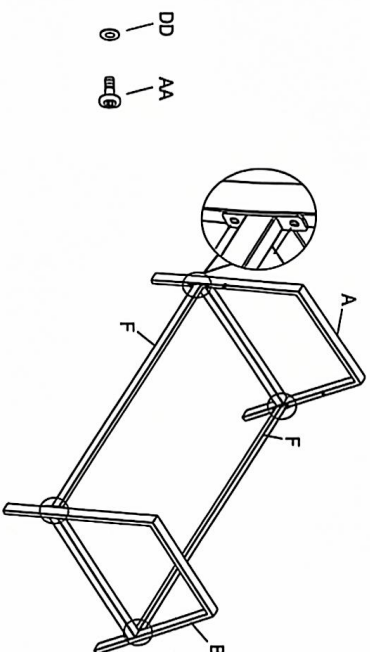

2 Attaching the Loveseat Seat and Back


- Place the loveseat seat (G) and back (H) on a soft, clean and level surface.
- Attach the back (H) to the seat (G), by using hex wrench (GG), M6 x 35 mm bolts (BB), small washers (DD), screw nut-M6 (FF), and wrench (HH).

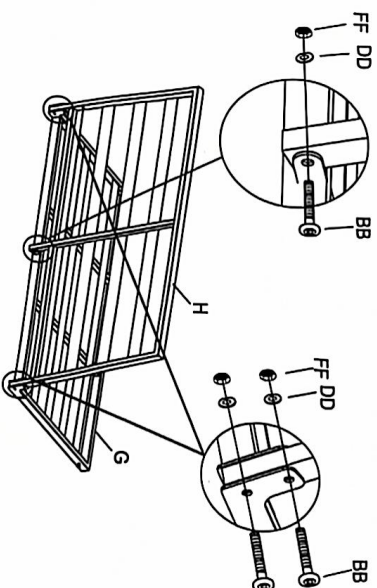

Loveseat Assembly (continued)


3 Attaching the Legs

- Insert the finished loveseat seat and back from step 2 into the leg frames on step 1.
- Attach the back (H) and seat (G) to the legs (A & B), by using M8 x 35 mm bolts (CC), larger washers (EE), and larger hex wrench (II).
- Fully tighten all the bolts on this loveseat.

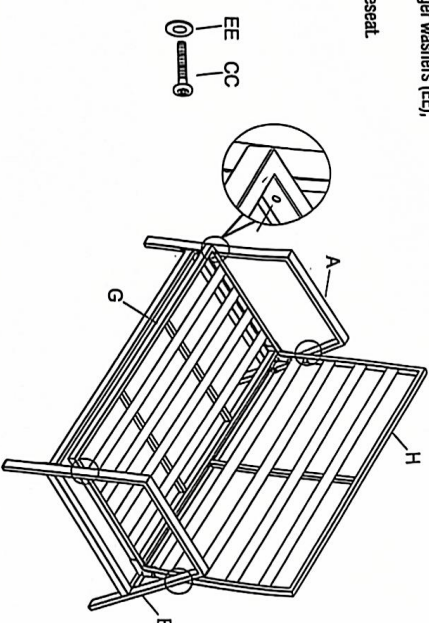

4 Placing the Cushion

- Place the seat cushion (I) and back cushion (J) on the loveseat seat (G) and loveseat back (H).
- The loveseat is now ready for use.

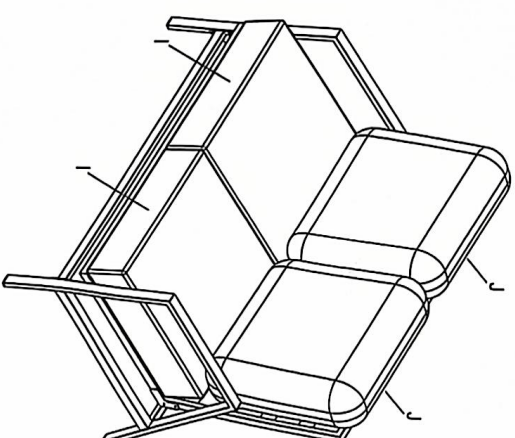

Maintenance

- When cleaning the cushions, use a mild soap and water mixture (DO NOT USE BLEACH) and gently rub the surface of the fabric and rinse with water. Allow time for cushions to dry before use. Always cover your cushions with waterproof covers when you are not using it to prolong the life of the cushions.
- Always make certain to cover your outdoor wood furniture with waterproof covers when you are not using it. Using covers will protect your furniture from all-weather elements and prolong the life of the wood furniture. Do not use plastic covers to protect your furniture as this may cause mold to grow on your furniture.

NOTICE: ONLY use the below Care and Maintenance section for outdoor furniture Use and Care guides.

Care and Cleaning

Follow these care and maintenance instructions to ensure your outdoor furniture lasts for years to come.

FRAME CARE

- Use mild soap and warm water to clean the frames.
- Rinse with clean water and dry thoroughly. Be sure to drain any water accumulated inside the frames. To thoroughly drain frames, remove footcups and tilt frames, if necessary, to remove all water. Water allowed to accumulate inside the frames and then exposed to sub-freezing temperatures can cause damage to frame tubing. Such damage caused by conditions other than normal is not covered under warranty.
- Any rust spots should be lightly sanded and treated with rust inhibitor and followed with an application of touch-up paint (not included).

CUSHION CARE

- Dust fabric weekly and remove dirt before it becomes embedded.
- For cleaning, use a mild cleaner with warm water. Rinse thoroughly. Flip cushions on their sides with the zipper facing down and unzip to ensure that all water drains.
- Avoid standing water on the surface of cushions.
- Cushions should be stored in a dry place if possible.