

# Installation and Operation Instruction

## (Shower Room)

---


# M-642 Shower Room

## Installation and Operation Instruction


### Packing List(Figure 1) :

| Num. | Name                 | Quantity    | Num. | Name                    | Quantity     |
|------|----------------------|-------------|------|-------------------------|--------------|
| 1    | top sheave           | one piece   | 7    | 4 * 30 screws           | six pieces   |
| 2    | Rail head            | two pieces  | 8    | Slide rail              | one piece    |
| 3    | Aluminum by wall     | two pieces  | 9    | Orientation block       | three pieces |
| 4    | Plastic hose         | six pieces  | 10   | Screws block            | eight pieces |
| 5    | Anti-collision block | six pieces  | 11   | 4*20 screws             | eight pieces |
| 6    | Block                | six pieces  | 12   | Handle                  | two pieces   |
| 7    | Fixed glass stator   | four pieces | 13   | Plastic magnetic stripe | two pieces   |
| 8    | Adjustable glass     | two pieces  |      | Slide                   |              |

### Requisite Tools:

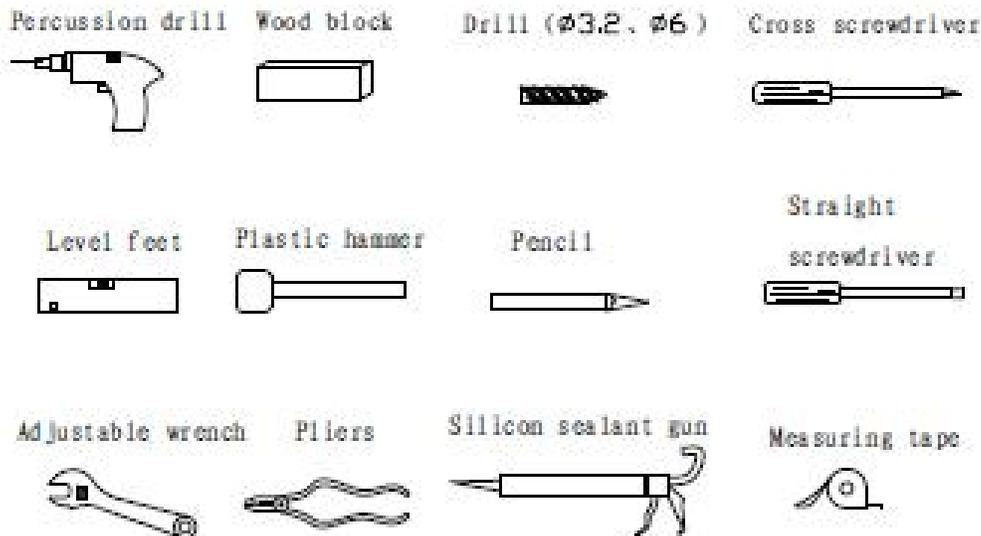


# General assembly drawing:

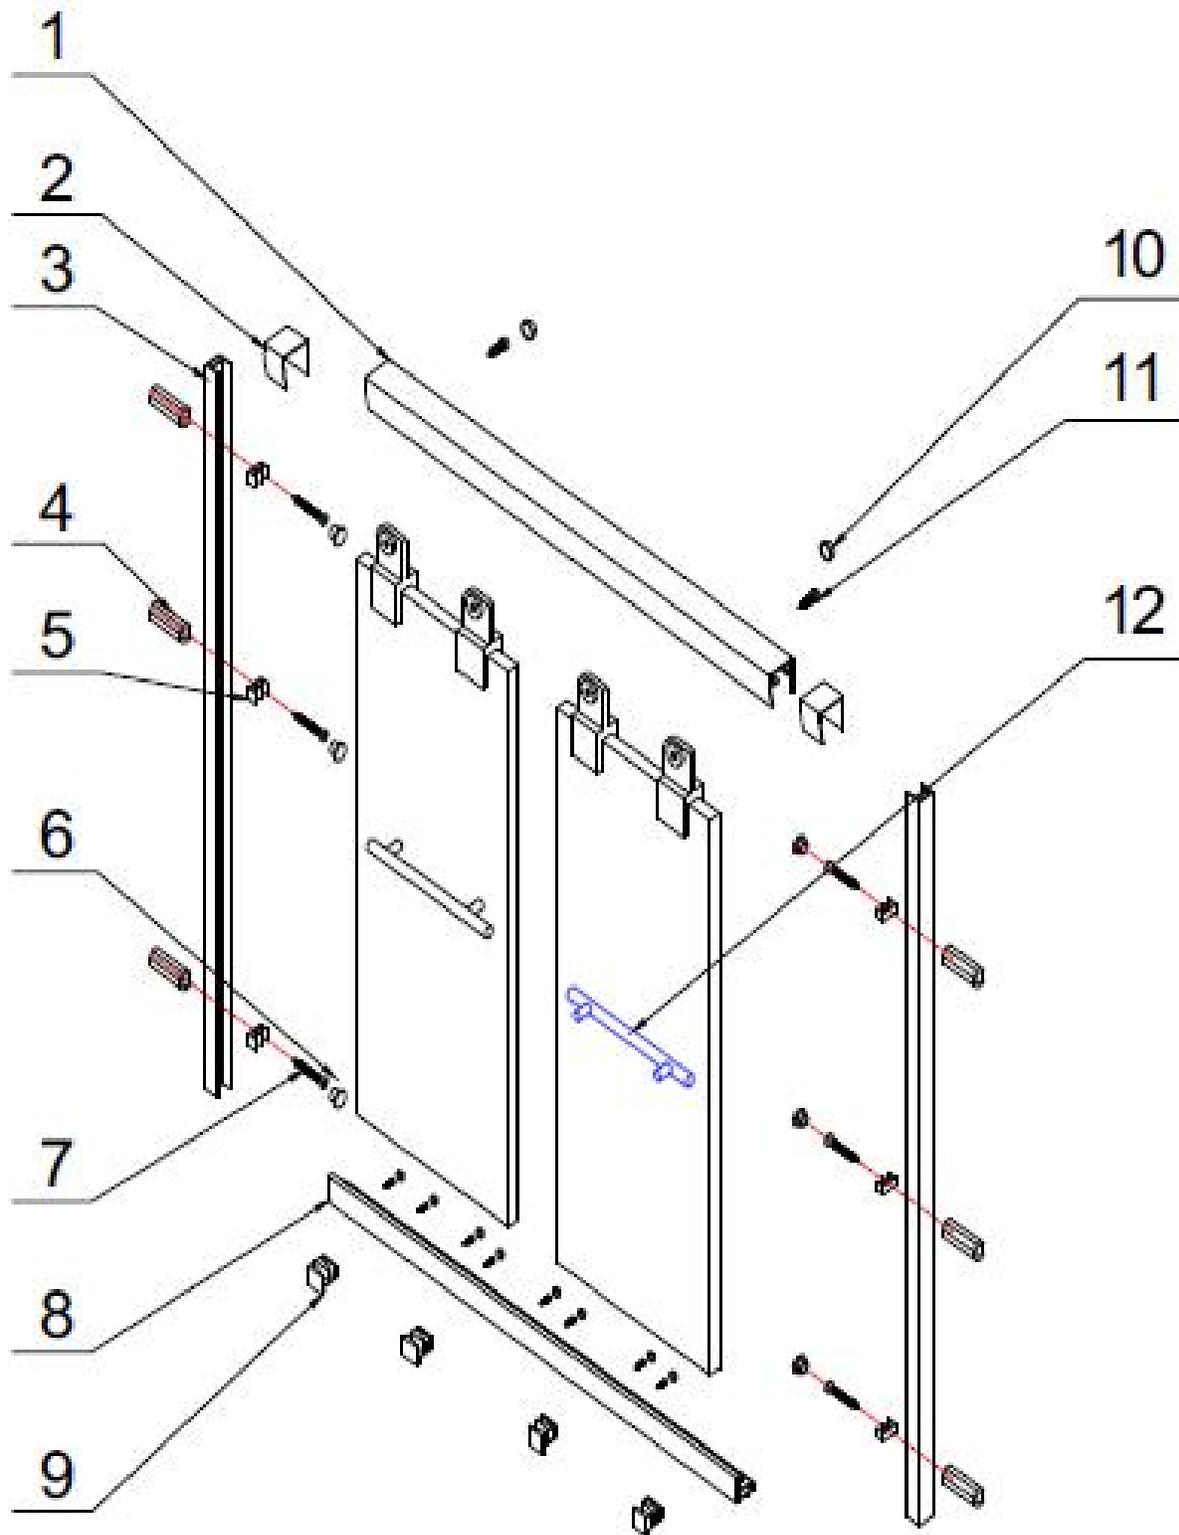


## The installation steps of the shower body:

1. Mark the position on wall aluminum material with a pencil. Next drill holes on wall with the percussion drill, knock the plastic colloid with plastic hammer, then tight up the two pieces of wall aluminum with 4 \* 30 screws. (Figure 2)

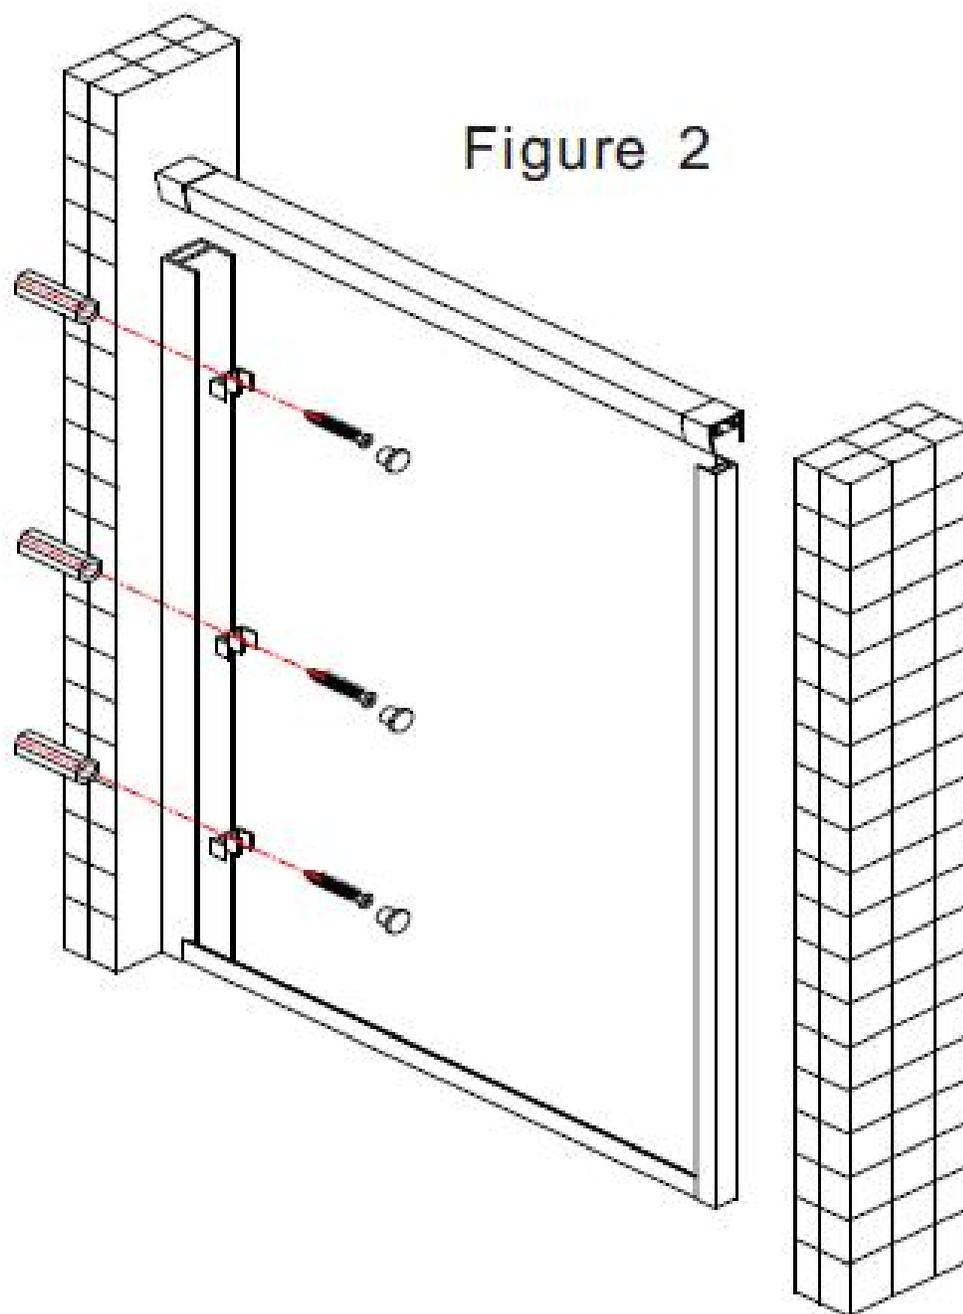


**2. Lean the adjustable glass to the inner side of the shower body, suspend the pulley onto the glide.**(Figure 3)

Figure 3

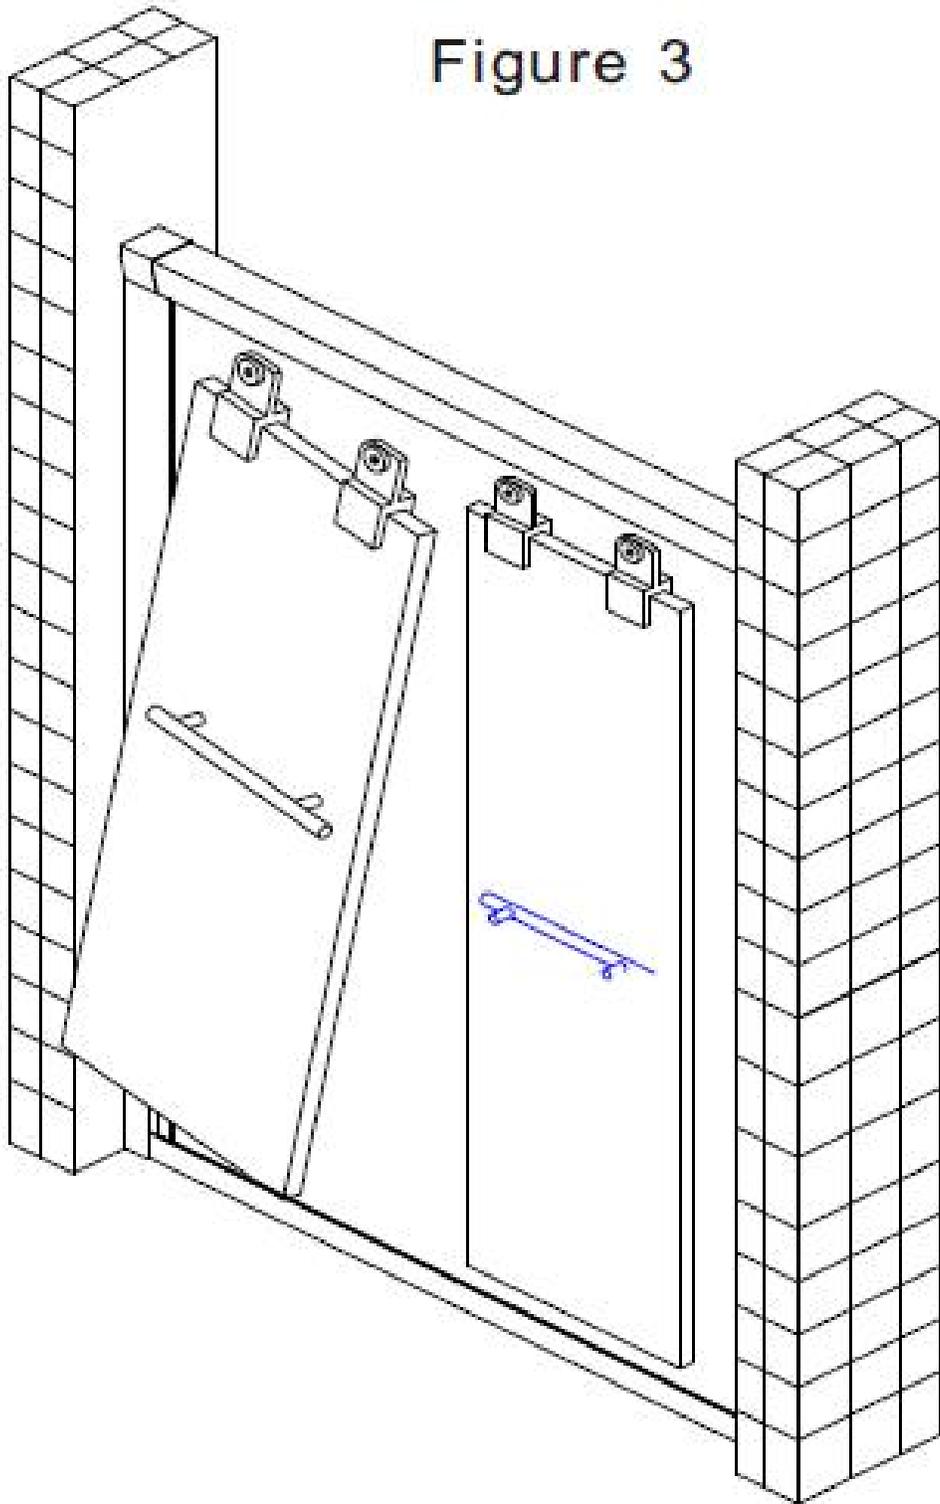


3. Adjust the top and bottom pulley, so that it appropriately elastic, smoothly slide and make the magnetic stripes closely absorbed (Figure 6)

Figure 4

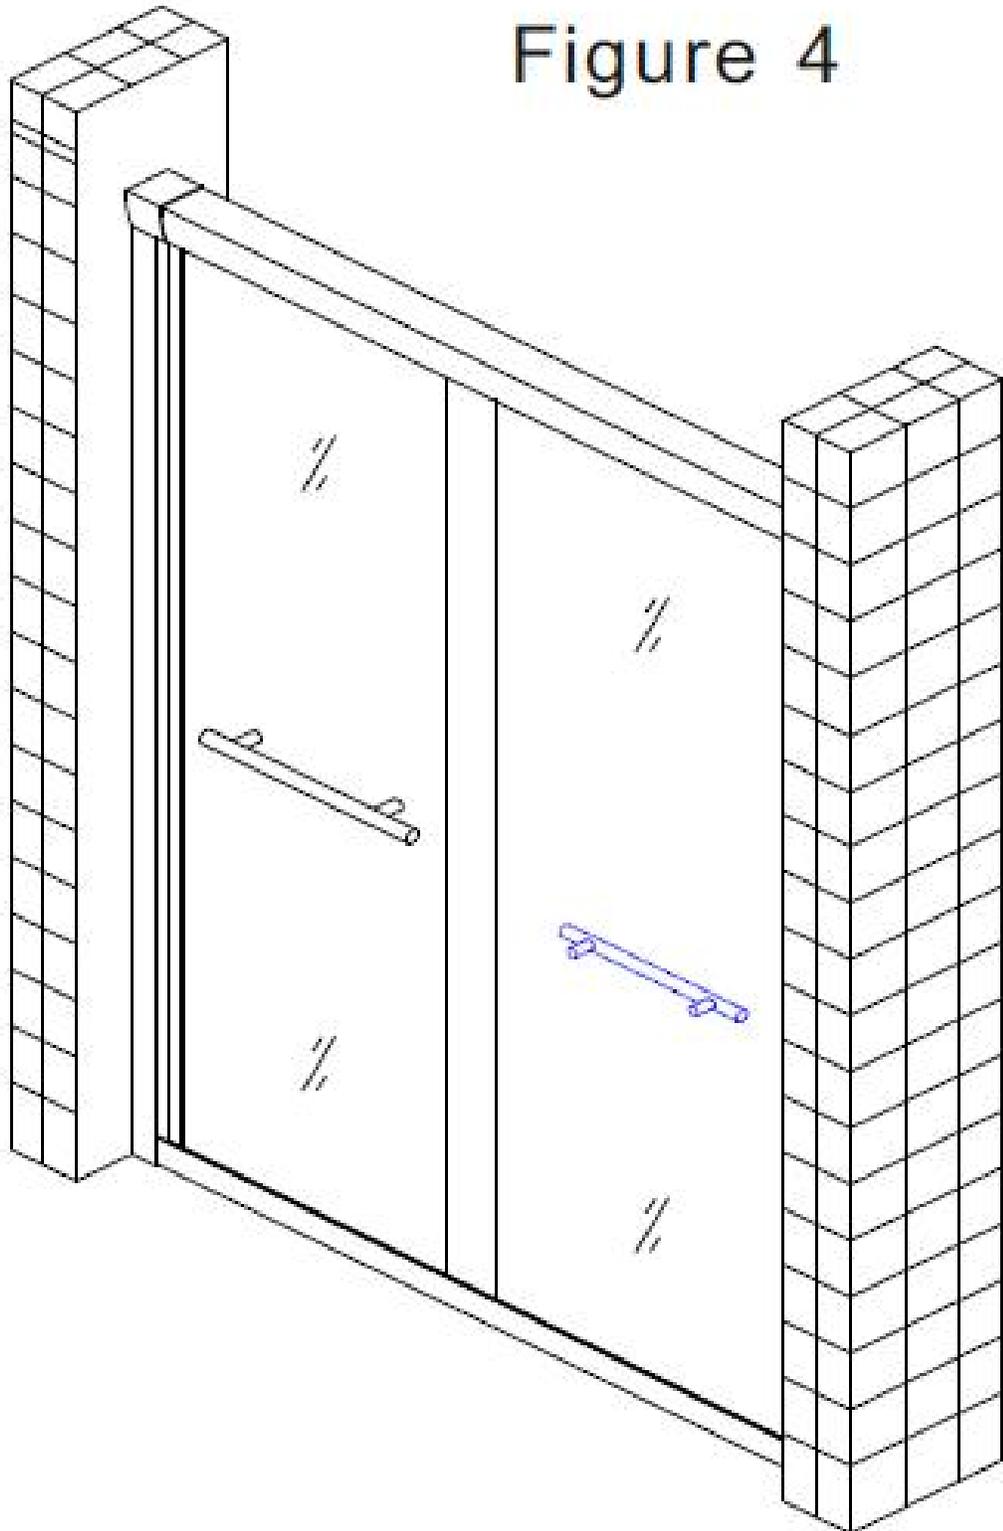

4. seal the four sides of the shower body with the glass cement. (Figure 5)

Figure 5

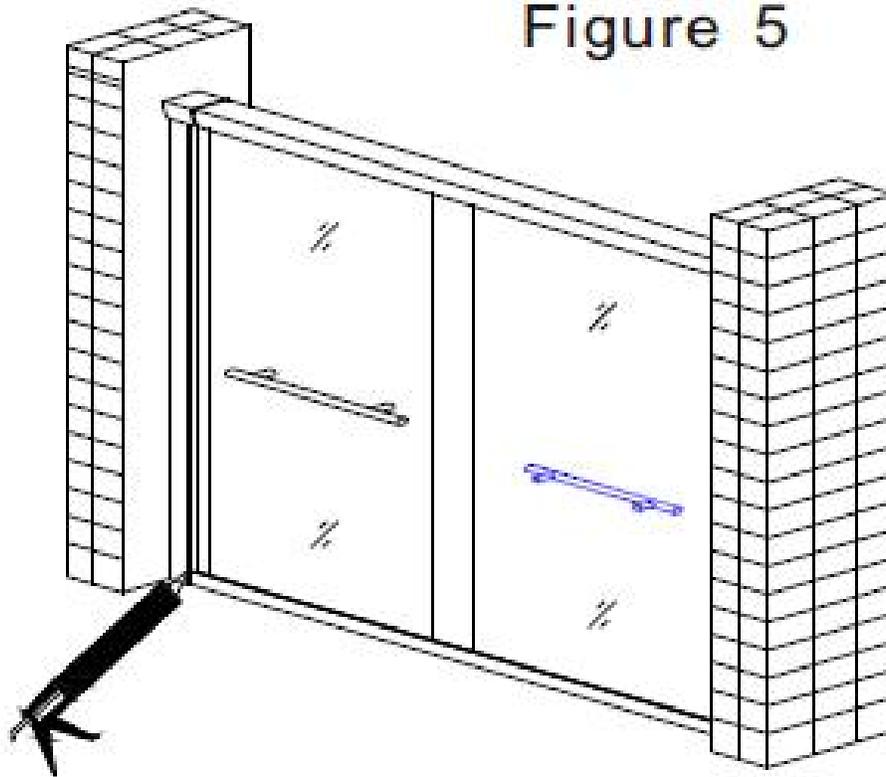

## Manitenance Methods and Notes

1. Use soft,dry cloth when cleaning the walls and chassis of shower room. For trivial dirt, use soft cloth or sponge with neutral detergent to clean. Please do not use Nylon products to clean, or it will lose the luster of shower room , and create dirt.
2. For the dense dirt, please use alcohol to remove them. When using the bathroom-exclusive detergent, please make sure to use it at a proper way and note on their container. Improper usage will have a negative impact on the human body, and create some adverse conditions on the products.
3. When using the Mildew, please operate it by Mildew Manual instructions. After finished, clean it with water and dry it with cloth.
- 4.If waterproof filler loses,it will lead to leakage. Therefore,once lost, be sure to re-filled.
- 5,When cleaning ,please do ot use the following items, cause they would have a negative impact on the human body, and will result in some adverse conditions on products. Those items included:acidic and alkaline solvent, drugs(such as hydrochloric acid),thinner and other solvents acetone, decontamination powder, polishing detergent, nylon broom,sand paper, and etc.
- 6.In daily usage, add some lubricant to the pulley,ensure for easy-usage and better-maintenance.