

# Installation and Operation Instruction

## (Shower room)

# M-657 (Shower room)


## Installation and Operation Instruction

Packing list (FIGURE 1):


Num.	Name	Quantity	Num.	Name	Quantity
1	plastic particles	ten pieces	9	gemel	two pieces
2	wall door folder	four pieces	10	ajustable glass	one piece
3	4*30round self-tapping screw	ten pieces	11	plastic magnetic stripe	two pieces
4	wall mounting stator	two pieces	12	bottom retaining aluminium	three pieces
5	stainless steel rod	two pieces	13	bottom waterproof plastic strip	one piece
6	glass folder	four pieces	14	handle	one pair
7	fixed glass	two pieces	15		
8	side waterproof plastic strip	three pieces			

## Requisite Tools:

Percussion drill



Wood block



Drill (Ø3.2, Ø6)




Cross screwdriver



Level foot



Plastic hammer



Pencil




Straight

screwdriver




Adjustable wrench



Pliers




Silicon sealant gun



Measuring tape




## General assembly drawing:

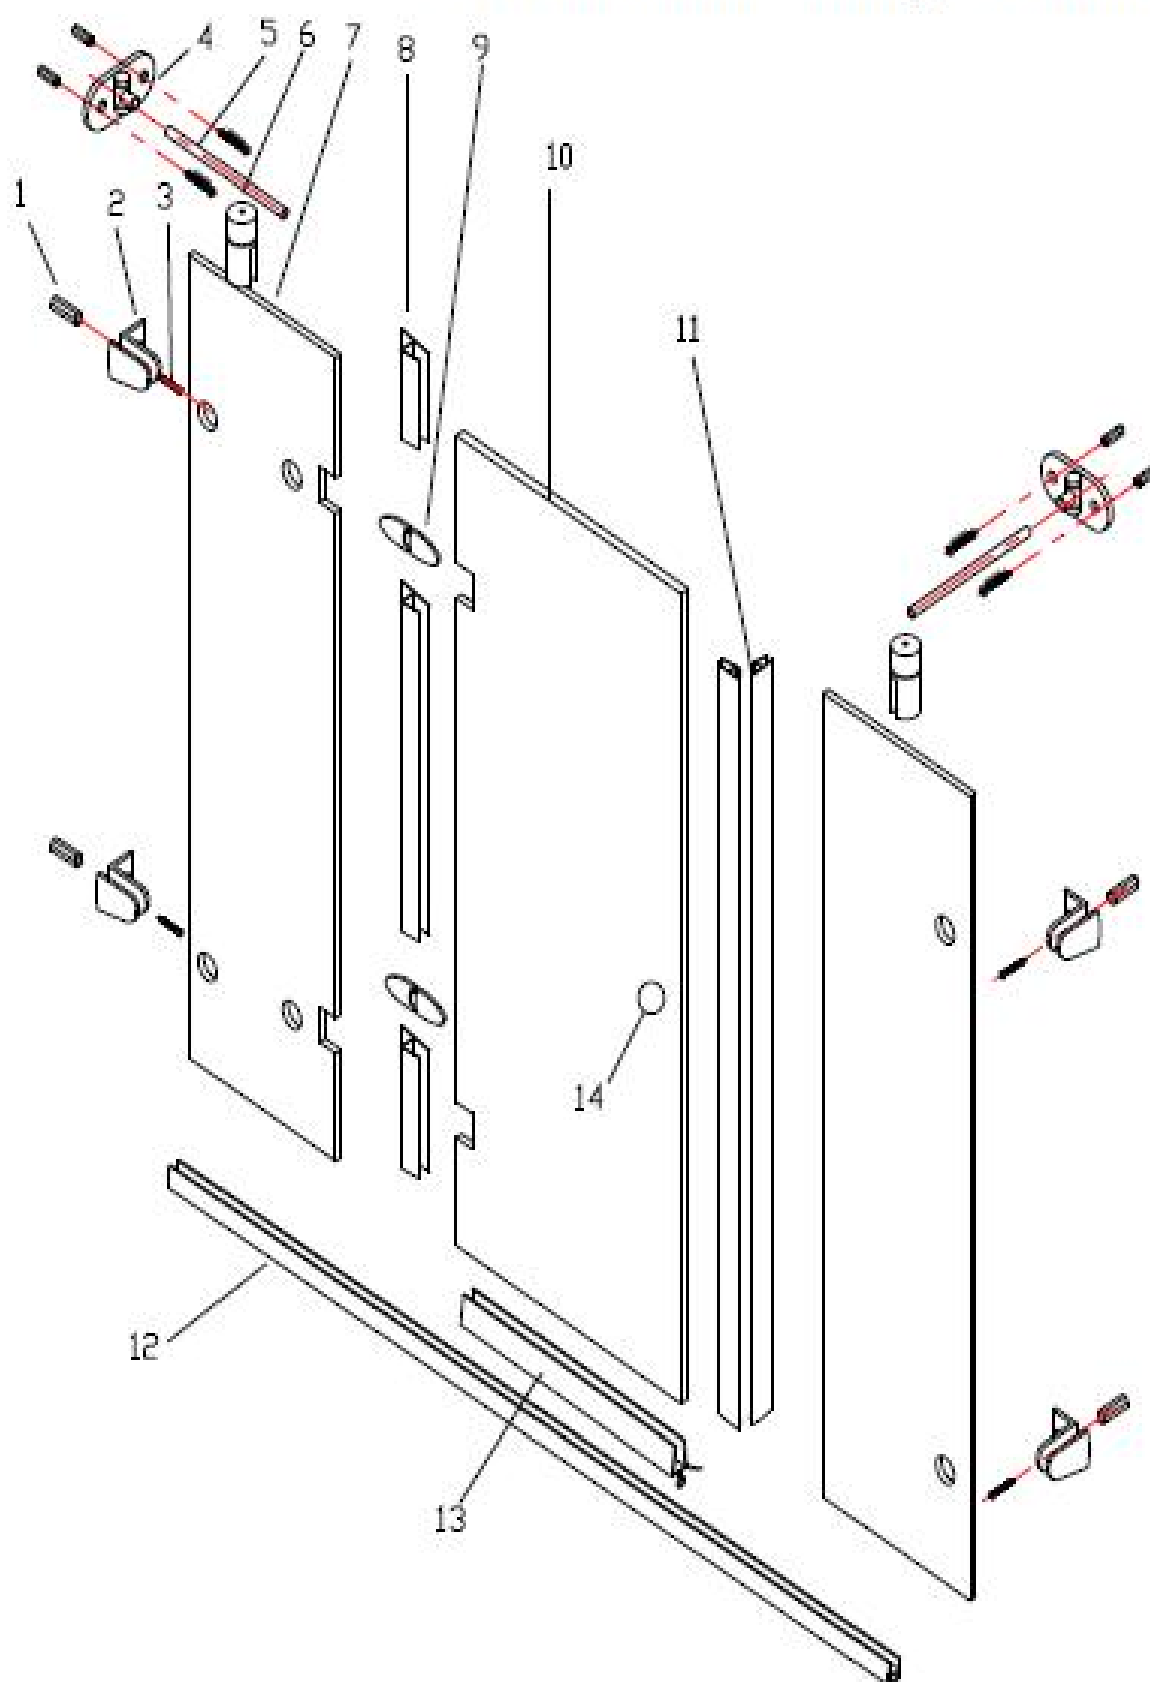

## The installation steps of the shower body:


1. Put the retaining aluminium onto the tray or the marblestrip, and keep it in the center of the stone. Test the drilled hole with the fixed glass with wall mount stator, and drill holes on wall with the percussion drill, knock the plastic colloid into the holes.

Figure 5

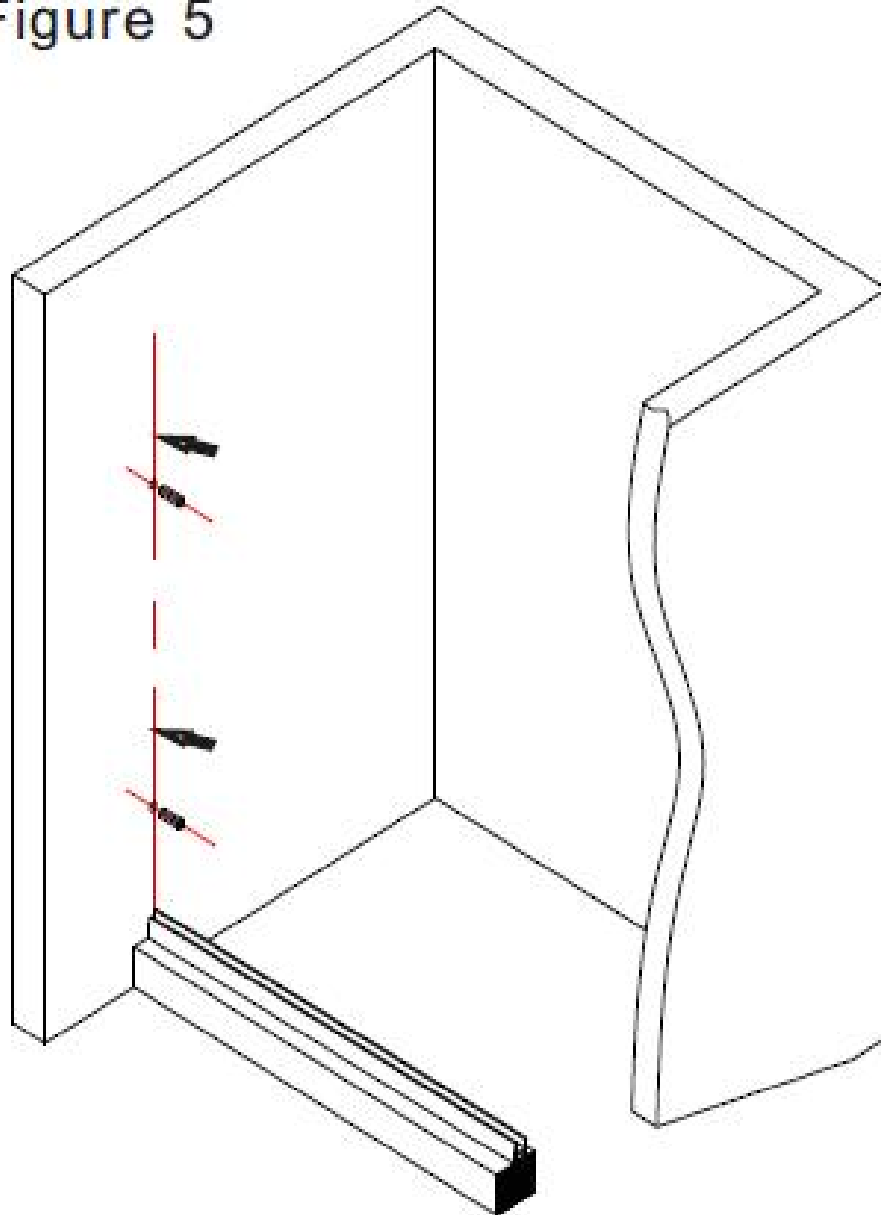


2. Aim the hole in the fixed glass towards the holes in the wall, and lock with tapping screws.

Figure 6

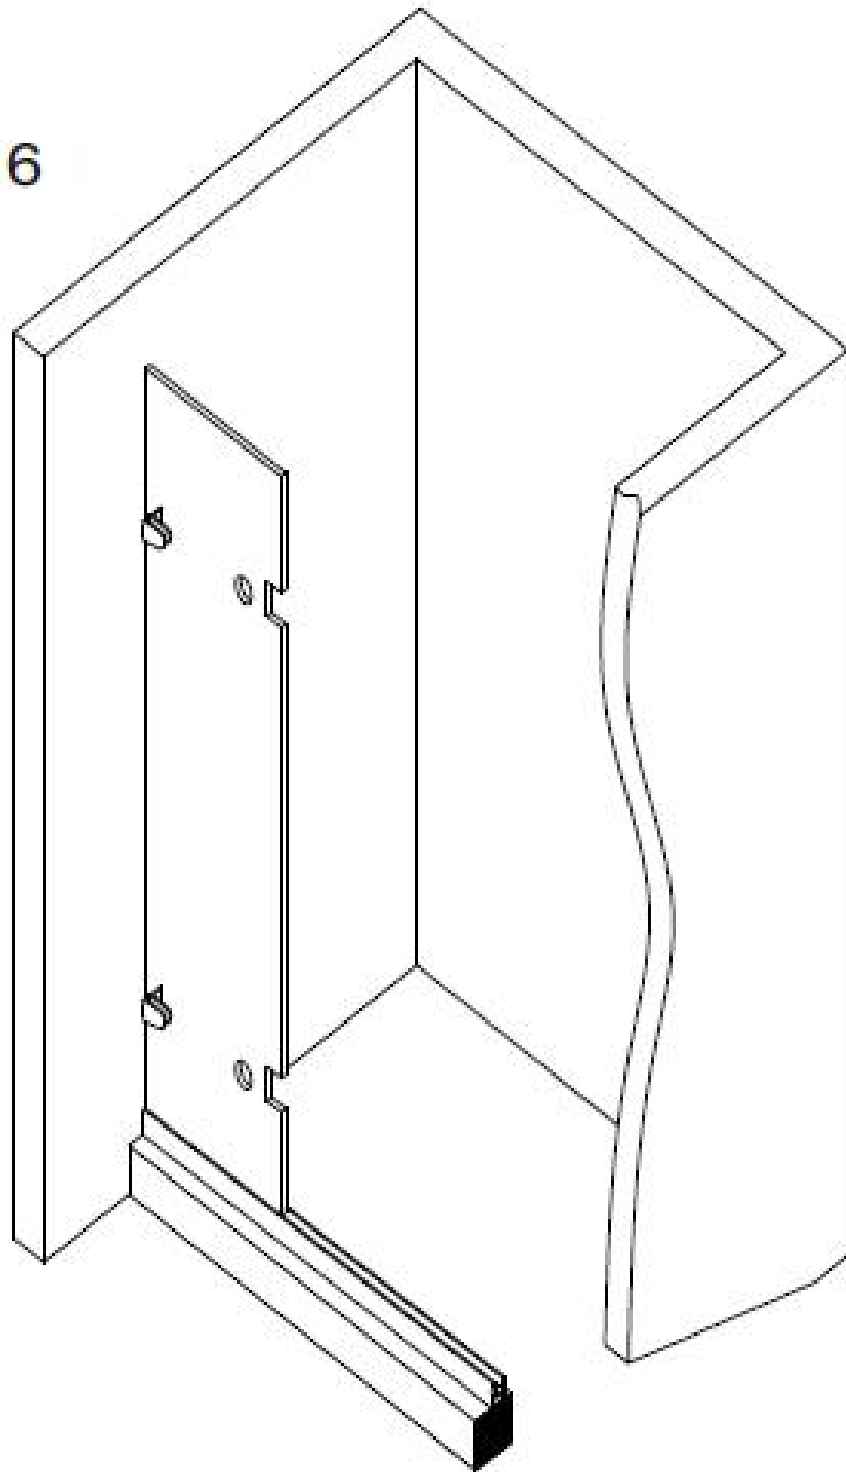


3. Put the gemel onto the fixed glass.(Figure 7)

Figure 7


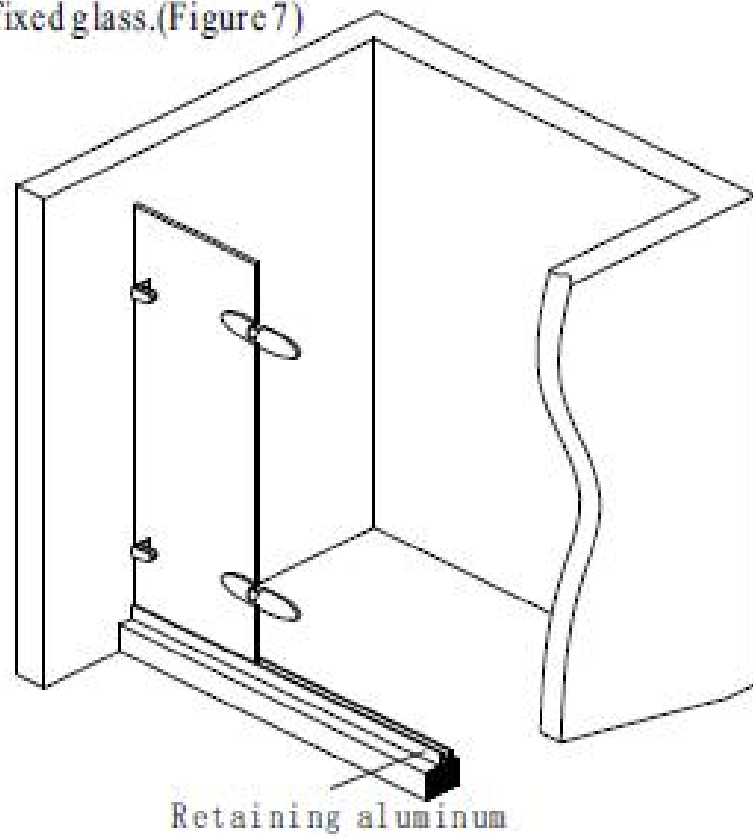


4. Fix the adjustable glass with gemel, and make balance of the top parts of adjustable glass and the fixed glass.

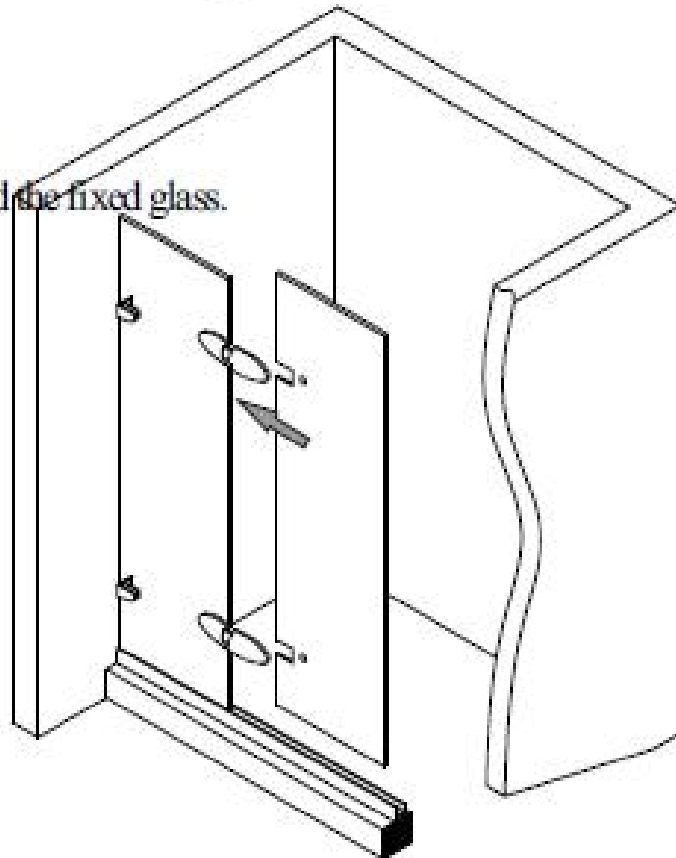

5. Mount another piece of fixed glass, to make the top part balance with both the fixed glass the adjustable glass and seal the plastic magnetic stripe firmly with the stainless steel rod. Then the fixed glass into the wall with 4\*30 screws

Install the stainless steel rod to make the shower room body firmly fixed. Use the glass glue to seal the body and the bottom gap, and the shower room is ready after 24 hours.

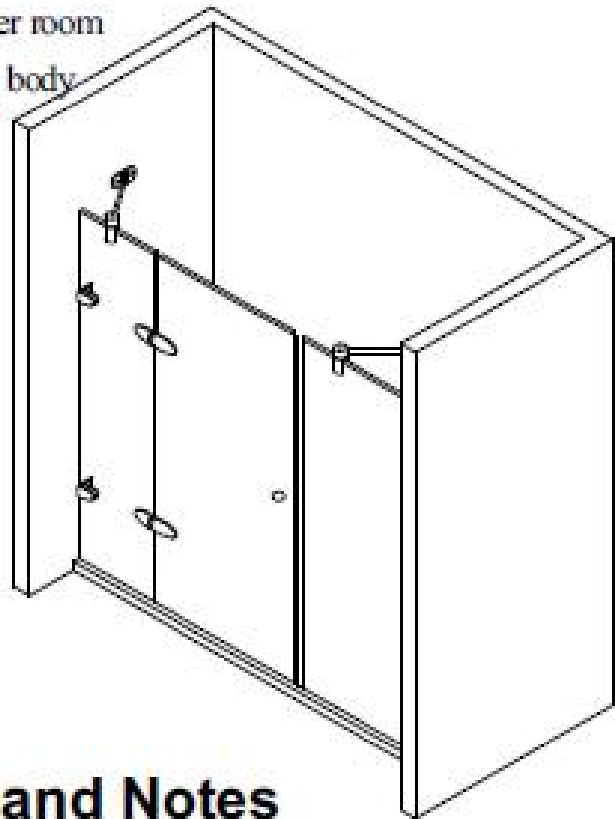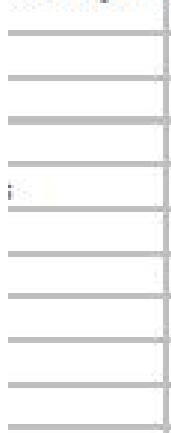

## Manitenance Methods and Notes

1. Use soft,dry cloth when cleaning the walls and chassis of shower room. For trivial dirt, use soft cloth or sponge with neutral detergent to clean. Please do not use Nylon products to clean, or it will lose the luster of shower room , and create dirt.
2. For the dense dirt, please use alcohol to remove them. When using the bathroom-exclusive detergent, please make sure to use it at a proper way and note on their container. Improper usage will have a negative impact on the human body, and create some adverse conditions on the products.
3. When using the Mildew, please operate it by Mildew Manual instructions. After finished, clean it with water and dry it with cloth.
- 4.If waterproof filler loses,it will lead to leakage. Therefore,once lost, be sure to re-filled.
- 5,When cleaning ,please do ot use the following items, cause they would have a negative impact on the human body, and will result in some adverse conditions on products. Those items included:acidic and alkaline solvent, drugs(such as hydrochloric acid),thinner and other solvents acetone, decontamination powder, polishing detergent, nylon broom,sand paper, and etc.
- 6,In daily usage, add some lubricant to the pulley,ensure for easy-usage and better-maintenance.